


- Step 1: Attach fin to base angle.
 Step 2: Put sealant on bottom of base angle. Place cable over chimney or vent with VentSaver centered behind and close to pipe. Fasten base to roof with the four 1 1/2" lag screws.
 Step 3: Pull on cable end with pliers until snug. Keep shoulder strap on the opposite side of the pipe from the VentSaver. Tighten nut and bolt firmly. Trim excess cable.
 Step 4: Install Snow Diverter Wing Kit using the provided spacers, where necessary, to compensate for minor rib height.

*Note: There is a minimum of 16" of flat area required between the major ribs, centered behind the pipe, to use the snow diverter wing kit. Wing kit spacers are provided to straddle minor ribs, if present in the panel. The use of the wing kit is optional and is not required.

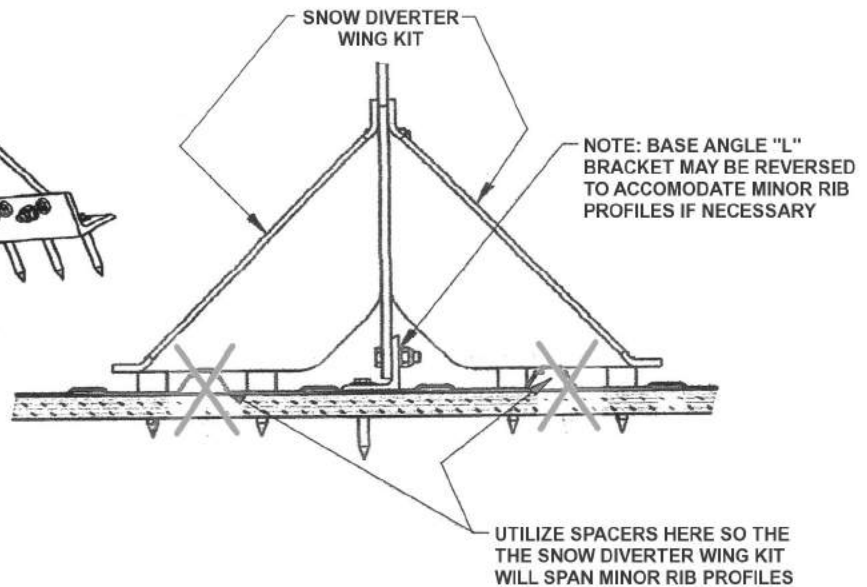

A MINIMUM OF 2" OF ADDITIONAL BLOCKING MAY BE REQUIRED BELOW FASTENING POINTS FOR ADDITIONAL STRENGTH

APPLY SEALANT TO ANY SPACERS USED WITH THE SNOW DIVERTER WING KIT

