

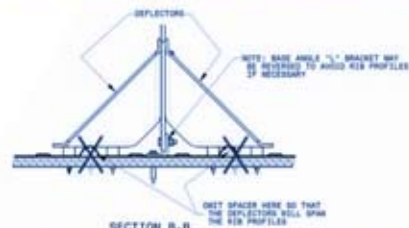


# VENTSAVER HD-C INSTALLATION METHOD

Mount VentSaver HD-C In 6 Easy Steps: Recommended Tools: Cordless drill with 5/16" driver, tin snips, two 7/16" wrenches, and caulk gun.

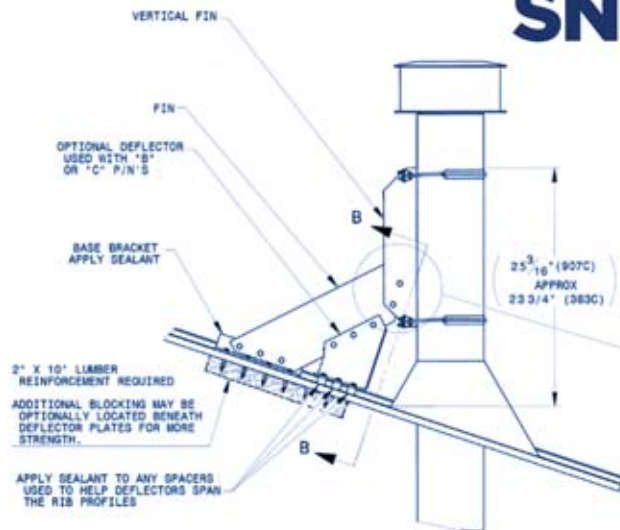

SECTION B-B  
VIEW OF DEFLECTOR AND CROSS SECTION OF ROOF

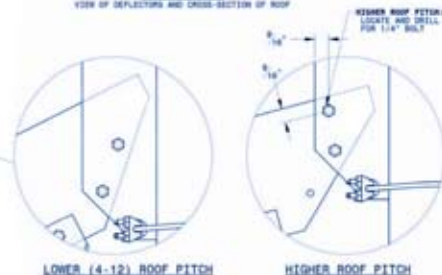

1. **Attach FIN to BASE ANGLE** - Assemble with three 1/4" x 3/4" s.s. bolts. NOTE: In case of rib obstruction, base angle is reversible.
2. **BASE Installation** - Put sealant on bottom of base angle. Fasten base to roof with the six 2" lag screws.
3. **DIVERTER WING KIT Installation** - Install Snow Diverter Wing Kit using the provided spacers, where necessary, to compensate for minor rib height. Maintain no less than 2 fasteners on each deflector to the roof structure. Three are preferred, when possible. In no case is only a single fastener adequate.
4. **Attach VERTICAL FIN to BASE ANGLE FIN** - Position Vertical Fin parallel with pipe and mark 2 holes onto Base Angle with a marker. Drill Holes and assemble with two 1/4" x 1" s.s. bolts.
5. **STRAP Installation** - Place cables around chimney or vent with VentSaver centered behind and close to pipe. Pull on cable end with pliers until snug. Keep shoulder straps on the opposite side of the pipe from the VentSaver. Tighten nuts and bolts firmly. Trim excess cable.
6. **Double check ALL fasteners for tightness!**

**\*Note:** Optional Wing Diverters do not work on every application and/or may need to be modified on site.

**Warranty:** The following warranty is made in lieu of all other warranties expressed or implied. Recommendations for proper use of the product are based on tests believed to be reliable. Any goods proven to be defective due to materials will be replaced, or purchase price refunded, but in no event shall the manufacturer be responsible for damages in excess of the purchase price. User shall determine the suitability of the product for its intended use and assumes all risks of its use or handling.

[www.SnoBlox-Snojax.com](http://www.SnoBlox-Snojax.com)

Call 1-800-SNOJAX-1